

# **4G NTRIP Master**

#### Includes:

- 4G+3G+2G radio module including NTRIP software (XBee socket compatible)
- 2 4G+3G+2G antennas with integrated cable
- Free PointPerfect RTK-SSR corrections until 2024





More info about the product!

4G NTRIP Master has several different configurations to provide you with flexibility:

SKU	Variation Name
AS-XBEE-4G-EU-UFL-00	Europe
AS-XBEE-4G-NA-UFL-00	North America

Get a discounted bulk price on this product for orders of 50 units or more. Contact us at info@ardusimple.com to get a quote.



## **Description**

The ArduSimple 4G NTRIP Master enables your RTK receiver to connect autonomously to internet, from any area with cellphone coverage, and by using a SIM card. No programming is required to use this product.

You can use this product as:

- NTRIP Client (to get corrections from your preferred correction service)
- NTRIP Server (to send your base corrections to a NTRIP caster like RTK2go.com)
- TCP socket client (to send position or any other message to your server)
- PointPerfect Client (This product has free RTK-SSR corrections until 31/12/2024.
  Later if you want you can get a subscription starting at only \$5.90/device/month)

Just introduce your SIM card, configure the device following our <u>User Guide</u>, and let the 4G NTRIP Master do the rest. If you find the hookup guide too complex just add to the shopping cart our <u>Configuration Service</u> if you want to receive it already pre-configured.

#### Good to know:

- Default configuration is at 115'200bps
- Compatible with simpleRTK2B Pro, simpleRTK3B and simpleRTK2B SBC.
- Compatible with u-blox Thingstream PointPerfect augmentation service.
- If you want to use it with simpleRTK2B Budget, you will need a <u>Shield for Second XBee socket (High Power)</u>.
- This product is not compatible with simpleRTK2B Lite
- You will need a SIM card with internet access capabilities to use this product. MicroSIM form factor.



## **Specifications**

#### Interfaces

- UART
- RS232 (requires accessory)


#### **4G NTRIP Master features**


- LTE FDD Cat.4 with dual antenna for Rx Diversity and MIMO
- Compatible with 2G, 3G and 4G networks
- Integrated SIM holder: MicroSIM
- Antenna type: external passive
- Antenna connector (modem side): uFL / IPEX
- Frequency (Europe variant):
  - o For Europe, but also Middle East & Asia, compatible with:
  - 4G Bands (MHz): B1(2100), B3(1800), B7(2600), B8(900), B20(800)
  - o 3G Bands (MHz): B2(2100), B8(900)
  - o 2G Bands (MHz): B3(1800), B8(900)
- Frequency (North America variant):
  - For USA\* & Canada, compatible with 4G and 3G networks.
  - 4G Bands (MHz): B2(1900), B4(1700), B5(850), B12/B13 (700)
  - 3G Bands (MHz): B2(1900), B5(850)
  - \* Only compatible with AT&T, T-Mobile and virtual operators working on these networks. Not compatible by default with Verizon SIM cards, contact us in this case.
- Operating temperature Range: -40 to +85deg
- Documentation: RED, RoHS, FCC, IC, PTCRB




# **Image Gallery**



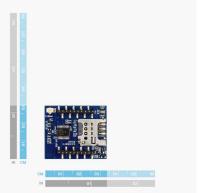

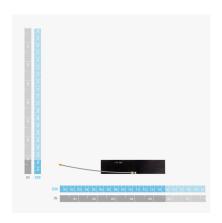
















### **Pinout**

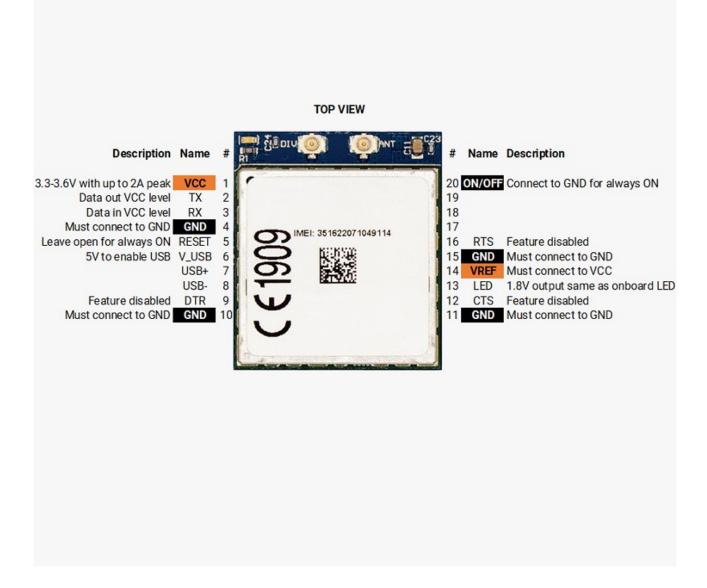



### **Documentation**

User Guide https://www.ardusimple.com/4g-ntrip-client-hookup-guide/

PCB Integration

Guide

https://www.ardusimple.com/pcb-integration-guides/

Footprint https://www.snapeda.com/search/?q=ardusimple

Download CAD

models

https://www.ardusimple.com/wp-content/uploads/3D\_CAD/AS-XBEE-

4G-EU-UFL-00-R01.STEP

https://www.ardusimple.com/wp-content/uploads/3D\_CAD/AS-XBEE-

4G-EU-UFL-00-R01.STEP

4G NTRIP Master includes free basic technical support. Contact info@ardusimple.com for more information.

Data and descriptions in this document are subject to change without notice. Product photos and pictures are for illustration purposes only and may differ from the real product appearance.